ZELIG PAD 700R

7” TOUCH SCREEN INTERNET TABLET PC

USER MANUAL

XZPAD700R

www.hamletcom.com

Dear Customer,

thanks for choosing an Hamlet product. Please carefully follow the instructions for its use and maintenance and, once this item has run its life span, we kindly ask You to dispose of it in an environmentally friendly way, by putting it in the separate bins for electrical/electronic waste, or to bring it back to your retailer who will collect it for free.

We inform You this product is manufactured with materials and components in compliance with ROHS directives: 2002/95/CE; with RAEE Directives: 2003/96/CE, Italian Legislative Decree 2005/151 and EMC Directive 2004/108/EC for the following standards:
EN 55022: 2006 + A1: 2007
EN 55024: 1998 + A1: 2001 + A2: 2003
EN 61000-3-2: 2006 + A1: 2009 + A2: 2009
EN 61000-3-3: 2008

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

The complete CE declaration of conformity of the product can be obtained by contacting Hamlet at info@hamletcom.com.
The information on the importer for your country are available in the “About Us” section of the Hamlet website at www.hamletcom.com.

Trademarks

All trademarks and company names mentioned in this manual are used for description purpose only and remain property of their respective owners.

Changes

The material in this document is for information only and subject to change without notice. Specifications and appearance are subject to change without prior notice.

Support

The support service for the Exagerate by Hamlet tablets is provided by:
SC GROUP – Assistenza Tecnica Salvadori Claudio
Via del Bosco 44 – 21052 Busto Arsizio (VA) – Italy
You can contact technical support phone number: 0331-674306 or e-mail at assistenza.tablet hamletcom.com.
For more information on Zelig Pad Tablets visit the web site www.hamletcom.com/ZeligTab.aspx.

1. Product Introductions

1. Camera
2. Back to MENU
3. Headphone Socket
4. DC Socket
5. Mini USB socket 1
6. Mini USB socket 2
7. Micro SD card slot
8. Power switch/MENU
9. Volume adjustment
10. HOME/Menu

2. What's Included

The following components are included with your purchased product:

- Zelig Pad 700R
- Power Adapter
- USB Cable
- Touch Stylus
- Instruction Manual

3. Getting Started

Before operating your Tablet PC for the first time, please read this manual carefully and follow the instructions below.

3.1 Battery charging

The tablet is equipped with a built-in rechargeable Lithium battery. It is suggested to fully charge the battery before use.

We strongly recommend to use the power adapter included in the packaging, using other adapter may damage the tablet and void the warranty.

Charging Process

1. Connect the power adapter to your tablet, and plug the power adapter to the nearest electrical outlet. The charging LED indicator located on product front will be turned to red, this shows that charging is in process. When the battery is fully charged, the charging LED indicator will disappear.
2. Users can still use the tablet while it is being charged.

3.2 ON/OFF

Turn On: after the battery has been fully charged, press & hold the power switch for around 4 seconds to turn on the device. Screen lock will be

showed after starting up.

Slide unlock icon upward to unlock and go to desktop; slide the mute icon downward to turn off sound and slide it downward again to turn on sound.

Turn Off: When the tablet is ON, press & hold the power switch for around 4 seconds and the system will popup out power off option, tap on it to turn the tablet off.

Screen Timeout: the screen timeout interval can be set according to your need, tap "Settings"→ "Display"→ "Screen timeout" to select your desired interval time for screen timeout.

Once the tablet starts screen timeout, press the power switch and quickly release, then screen lock will be showed, slide the unlock icon upward to unlock screen.

3.3 Select Language

Select your language before starting to operate the tablet.

To select the language, tap on the "Settings" icon → "Language & keyboard" → "Select language".

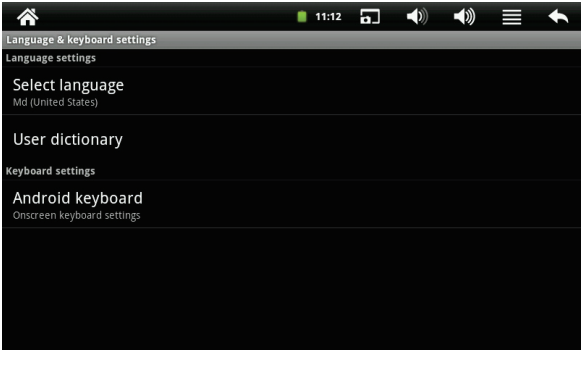

3.4 Screen calibration

In order to ensure accurate touch operations, we suggest to calibrate the screen before any touch operations. To calibrate the touch screen, tap the “Settings” icon→ “Touch screen calibrate”. Then follow the prompts to do the touch screen calibration.

3.5 Date & time setup

Tap on the “Settings” icon → tap “Date & time” to setup the Date, Time, Time zone, 24-hour format and Date format.

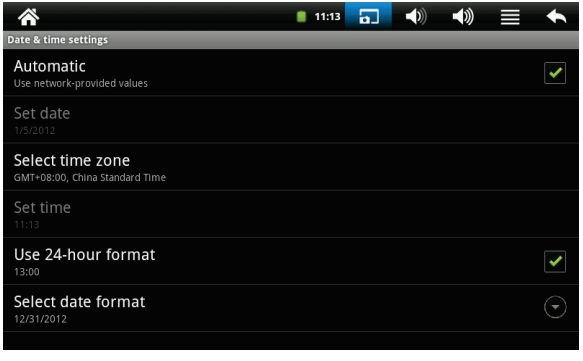

3.6 Automatic Rotation Of Screen Interface

This tablet is equipped with G-sensor, the screen interface can be automatically adjusted according to the direction of the device. To turn on this function, tap “Settings”→ “Display”→tick the option of “Auto-rotate screen”.

3.7 Use of Micro SD card and U-Disk

Installing Micro SD card

Insert the Micro SD card into the card slot and gently press it in until you hear the sound of "Click". A prompt notice will appear on the top left corner of the screen: “Preparing Memory device”.

Installing U-Disk

Plug the U-Disk into the USB socket on tablet. A prompt notice will appear on the top of left corner of the screen: “Preparing Memory device”.

Browse the files in Micro SD card or U-Disk:

Run "My Pad" application, then all files under the root directory will be displayed, select "SD1" to browse the files in the Micro SD card; select “UDisk2” to browse the contents in the U-Disk.

Remove Micro SD card or U-Disk

Close all the files opened from the Micro SD card or U-Disk, go to “My Pad”, tap on the memory device(SD1 or UDisk2) which you want to remove, tap “Unmount” located at the right bottom of screen, system will remind you “Are you sure to unmount SD Card1?” or “Are you sure to unmount U Disk2”, confirm it and system will prompt: “Memory device safe to remove”, then you can remove the memory device from the tablet. After removing the memory devices from the tablet, system will prompt: “Removed Memory device”.

Notice: when you remove the Micro SD card from tablet, gently press the card and it will get out a little bit, then pull it out.

Important notice:

1. Make sure to insert the Micro SD card and U-Disk in correct direction, otherwise they may get damaged.

2. Please remove the Micro SD card or U-Disk according to standard procedures mentioned above, do not forcibly pull out them, otherwise, they are easy to be damaged and data may be lost.
3. Please do not carry out hot swapping when using or browsing the files in Micro SD card or U-Disk. Hot swapping may damage the Micro SD card or U-Disk. Please close all files being used before removing them.
4. In order to avoid the incompatibility, we suggest to use the major brand Micro SD cards and U-Disk.

3.8 Storage Informations

You can easily check the storage informations of the Tablet's internal memory, Micro SD card and U-Disk at any time. Just run the "My Pad" application, and tap on the memory device (LOCAL, SD1 or UDisk2) which you want to see the storage info, system will display the total space and free space informations at the left bottom of screen.

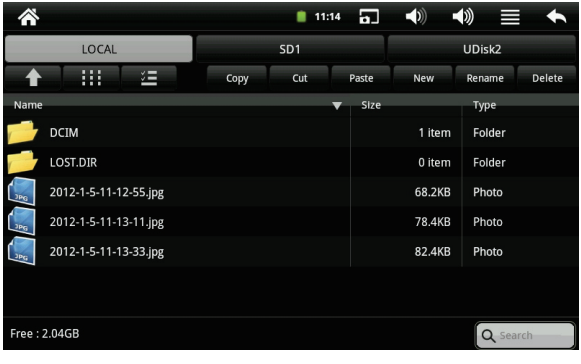

3.9 Wi-Fi Connection

1. Tap on "Settings" icon.
2. Then select "Wireless & networks".
3. Tick the check box behind Wi-Fi to turn it on.
4. Select "Wi-Fi setting" option to setup Wi-Fi network.
5. All available Wi-Fi networks will be listed, tap on your Wi-Fi network and start to connect.
6. If the Wi-Fi network does not need a password, tap "connect" to start the connection. If the Wi-Fi network needs a password, then input the password and tap “connect” to start the connection.
7. If the Wi-Fi network has been successfully connected before, that information will be stored. Connection will be done automatically.
8. Once your tablet connects to Wi-Fi successfully, the Wi-Fi icon will appear on the status bar at the top of the screen.

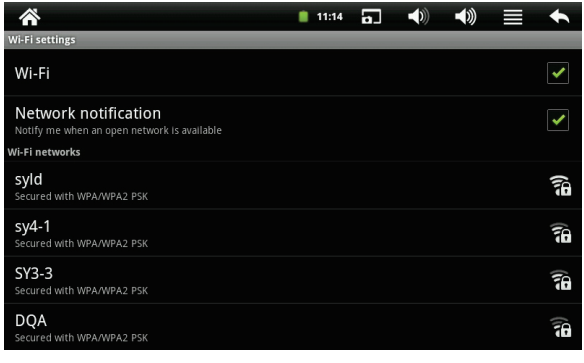

4. Input Operations

4.1 Touch Keyboard

Whenever an application needs text or numbers input, the touch keyboard will automatically popup on screen.

4.2 Touch Screen

The touch-screen allows for quick, easy and convenient navigation for all applications.

The smaller the point that comes in contact with the screen, the more precise object selection can be. If you have problems navigating with your fingers, we recommend to use the stylus provided or a non-sharp pointed instrument to increase the precision of navigation.

You are instructed to use the following tap or touch navigation methods:

Tap: quick tap & release on an icon on the screen to enter that application.

Finger Slide: touch & slide your finger across the screen and then release to go to next screen interface (screen page).

Touch & hold: touch and hold an application in place for approx. 2 seconds, and then release to display the window with different options.

Touch & drag: touch & hold an application icon and drag it to different position / page, or drag it to trash bin to delete it from desktop.

4.3 Mouse

The device supports external USB mouse. Just plug in the USB mouse to the USB socket of device, then you can use it right away.

5. Desktop

5.1 Status bar

The status bar is on the top of the screen.

The following table shows the function and meaning of different buttons and icons of the status bar.

	Home	Back to desktop
	Wi-Fi	Display Wi-Fi signal status
	Battery	Display battery status
15:50	**Clock**	Display current time
	Screen capture	Take a screenshot
	Volume	Increase/Decrease volume
	Menu	Open option menu
	Back	Back to previous step

5.2 Main interface

The tablet includes two main interfaces: desktop interface and application icons interface. When at desktop interface, tap icon to go to application icons interface, when at application icons interface, tap Home icon to go to desktop interface.

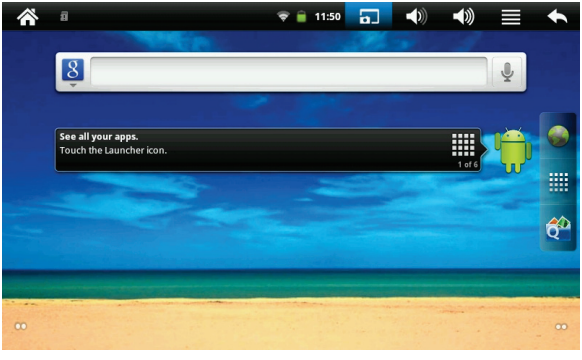

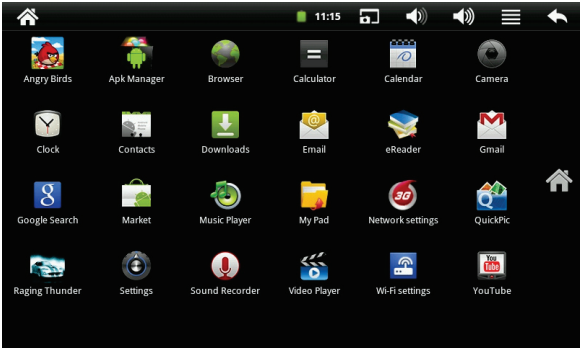

5.3 Desktop Icons

Users can move the application icons from application icons interface to desktop, go to application icon interface, tap on the application icon and hold it for around 4 seconds to drag it from application icons interface to desktop. The application icons on desktop can also be moved or deleted, just tap on the application icon and hold it for around 4 seconds, then you can move the icon to different position or move it to trash can to delete it.

6. Introductions of Typical Applications

6.1 APK Manager

With the “APK Manager”, users can install the applications from your Micro SD card. Tap on the **APK Manager** icon, it will automatically scan and list all the APK files in your Micro SD card, select any of the APK files to install the applications onto your tablet.

6.2 Browser

After connecting your tablet to Wi-Fi network, tap the **Browser** icon on desktop to open web browser. The following interface pops up immediately:

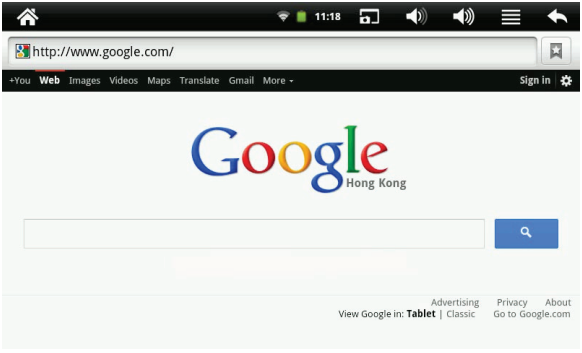

Then you can start web surfing now.

During web surfing, tap on the menu icon located at the right top corner of the screen to get more options:

1. **New window:** to open up new window of web browser
2. **Bookmarks:** to see the Bookmarks, Most visited websites and History
3. **Windows:** to see different windows of web surfing

4. **Refresh:** to refresh the page
5. **More:** more options of “Add bookmark”, “Find on page”, “Select text”, “Page info”, “Share page”, “Downloads”, “Settings”.

6.3 Calculator

The tablet is with built-in calculator, tap on the **Calculator** icon to carry out your calculations:

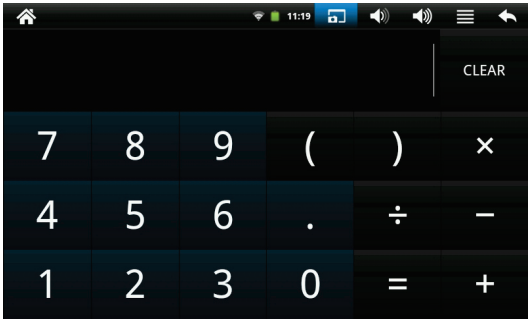

6.4 Calendar

Users can use the Calendar to check date, time and memorandum or add memorandum etc. But before doing this, you have to sign in the Google Account.

1. Tap on the **Calendar** icon, then a dialog box of “Add a Google Account” will pop up. Tap “Next” to go the next step.
2. If you do not have a Google Account, then tap “Create” to create a new Google account, if you already had a Google Account, tap on “Sign in” to go to next step.

3. Input Gmail address and password, then tap “Next” to go forward.

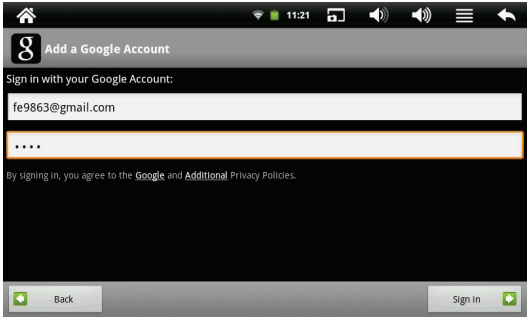

4. After you finish the setup, the interface will automatically exit and return to the main interface. Tap on the Calendar icon again to check date, time and add memorandum etc. Tap on the menu button to popup more setting options of 1 Day, 7 Weeks, Agenda, Today, More, see the screen interface as below:

6.5 Gmail

After you signed in the Google Account (mentioned above), tap on the **Gmail** icon, then all of your Gmail accounts will be listed, tap on the menu icon to see below options:

1. **Refresh:** to refresh the inbox
2. **Compose:** to compose new e-mail
3. **Accounts:** to see your other Gmail account or add new Gmail account.
4. **Go to labels:** to go to other directories of the Gmail account.
5. **Search:** to search mails
6. **More:** more options of “Settings”, “Help” and “About”.

6.6 Market

After you signed in the Google Account(mentioned above), tap on the **Market** icon, and accept the Android Market Terms of Service to enter into Android market. You can download more apps from the Android market.

If you want to download apps from Android market, tap on the app icon which you want to download, follow the procedures to download the app and install it onto you tablet.

6.7 Contacts

You can create an address book of your personal contacts.

1. Tap on the **Contacts** application icon to run the application.
2. Tap on the **menu** icon to display below options:

Search: to search contacts

New contact: to add new contact, input the contact’s information and tap “Done” to add a new contact.

Display options: to select the options for contacts display.

Accounts: general sync settings and manage accounts(add or remove account).

Import/Export: import/Export contacts.

3. In the **Contacts** screen, tap on the desired contact, then tap the “star” icon in the upper right corner of screen to add the Contact to Favorites.
4. In the Contacts screen, tap on the desired contact, then tap the menu icon to edit/share/delete the contact.

6.8 Email

You can enter one or more personal email address which you would like to access through this tablet.

Tap on **Email** icon to setup your email account according to the procedures. You can receive or send e-mails after setup.

To read emails, tap on the **Email** icon, if you setup only one email account, it opens immediately, if you have setup multiple accounts, they will be listed in the **Accounts** screen. Tap on the desired email account, and then tap “Inbox”, all emails will be listed, tap on the email which you want to open. You can also **Reply** or **Delete** the emails.

On the Inbox screen, you can tap menu icon to **Compose New Email**, **Edit Email Account**, **Delete Email Accounts** or **Set Default Email Account**.

6.9 QuicPic

Tap on the **QuicPic** icon to run the application.

You can view all the videos and photos saved in the tablet’s internal memory or your Micro SD card.

6.10 MyPad

Tap on **MyPad** icon to browse the files saved in your memory devices (LOCAL, SD1 or UDisk2).

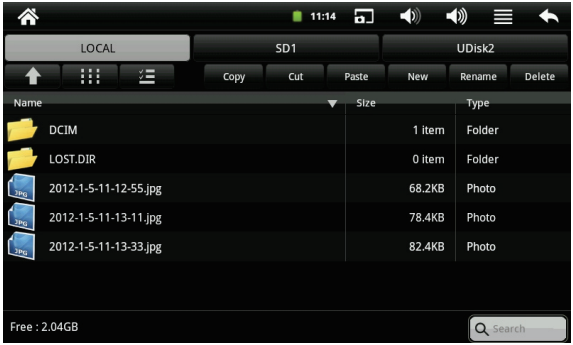

Tap on corresponding memory devices (LOCAL, SD1 or UDisk2) to see the files inside. You can also **Copy**, **Cut** or **Paste** files between each memory device, tap on the icon for multiple selection. You can also create new folder (**New**), **Rename**/ **Delete** file/folder in each memory device.

6.11 Music Player

To play the music, tap on the **Music Player** icon to run the application.

All songs will be listed and tap on your desired song to play it.

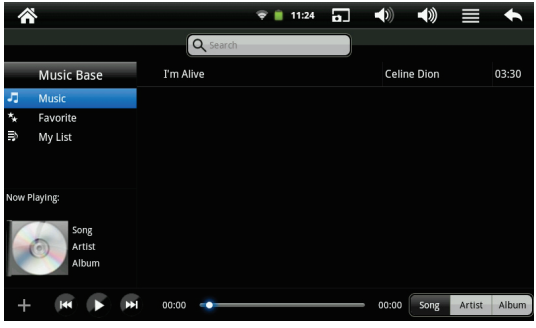

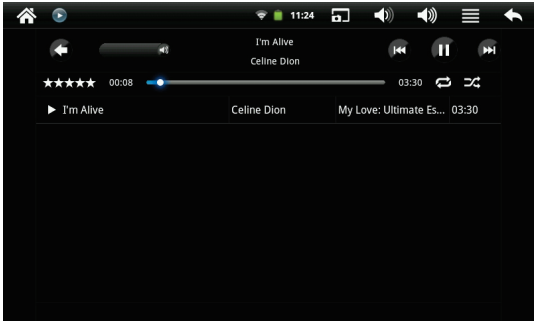

Tap the icon to run shuffle playback mode

Tap the icon to run loop playback mode.

6.12 Video Player

To play the videos, tap on the **Video Player** icon to run the application.

All videos will be listed and tap on your desired video to play it.

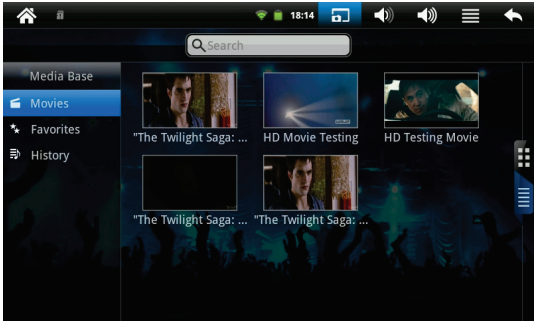

6.13 Sound Recorder

To start the sound recorder, tap on the **Sound Recorder** icon.

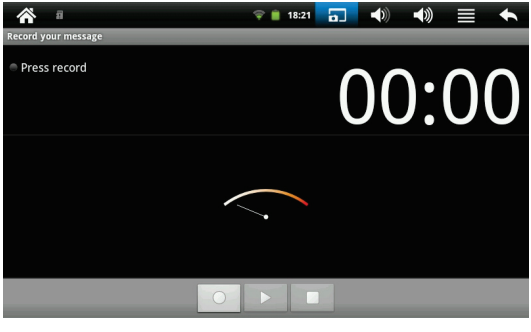

Tap on the icon to start recording.

Tap on the icon to stop recording. System will prompt:

Use this recording

Discard

Tap on “Use this recording” to save it; tap “Discard” to discard this recording.

Tap on the icon to listen to the recording recorded just now.

6.14 Clock

Tap on the **Clock** icon to run the application.

After running the **Clock** application, you can setup alarm clock, start photo browsing, play the music or back to desktop.

6.15 Camera

Tap on the **Camera** icon to run the application.

The camera is located at the middle of tablet top, aim at it when you take photo or video. Tap to start to take photo or video.

If you want to take photo, tap on the icon to take photo; if you want to take video, tap on the icon to take video.

The photos or videos will be saved automatically to internal memory, select “MyPad”, then select folder “DCIM”, select “Camera” to find the photos or videos just took.

You can also view your previous photos or videos by tapping on the photo icon at the top right corner of screen. When you view the photos or videos, tap on it to display more options of slideshow, delete, share, zoom in/out, clip, rotating, or set as wallpaper etc.

7. Personalized settings

Tap on the **Settings** icon to carry out personalized settings.

7.1 Wireless & networks

To setup the Wireless networks for your tablet.

7.2 Sound

Silent mode

Tick it to make all sounds mute except the media and alarm clock.

Volume

To setup the sound volume for Media, Alarm and Notification.

Notification ringtone

To setup the defaulted notification ringtone.

Audible selection

Tick it to play sound while making screen selection.

Screen lock sounds

Tick it to play sound when locking and unlocking the screen.

7.3 Display

Brightness

To adjust the screen brightness.

Auto-rotate screen

Tick it to allow the tablet automatically rotates the screen according to its direction.

Animation

Animation settings (No animations, Some animations or All animations).

Screen timeout

To adjust the interval time of screen timeout.

7.4 Location & security

Use wireless network

Tick it to determine your location by Wi-Fi and/or mobile networks.

Setup screen lock

To setup locking screen with a pattern, PIN or password.

Visible passwords

Tick it to show password as you type.

7.5 Applications

Unknown sources

Tick it to allow installation of non-Market applications.

Manage applications

To manage and remove the applications installed in your tablet.

Running services

To view and control currently running services.

Storage use

To view storage used by applications.

Battery use

To view the situation of battery use.

Development

To set options for application development.

7.6 Accounts & sync

Background data

Tick it to make the applications can sync, send, and receive data at any time.

Auto-sync

Tick it to make all applications sync data automatically.

Add account

To add another account to your tablet.

7.7 Privacy

Factory data reset

Select it to erase all data on device.

Format Local

Select it to format the internal memory.

7.8 Storage

To check the storage information (total space, available space) of your SD card, U-Disk and Internal storage. You can also select to unmount SD card/U-Disk or erase all data on the storage devices.

7.9 Language & keyboard

Select language

To select the right language for you.

User dictionary

To add words to user dictionary, you can also edit or delete the words.

Android keyboard

Onscreen settings for Android keyboard.

7.10 Date & Time

To setup the Date, Time, Time zone, 24-hour format and Date format for your tablet.

7.11 Touch screen calibrate

To calibrate the touch screen.

7.12 About device

Status

To check battery status, battery level, up time and Wi-Fi MAC address.

Battery use

To check what has been using the battery.

Legal information

To check related legal information.

Model number

Tablet model number.

Android version

Tablet OS version.

Kernel version

Tablet Kernel version.

Build number

Tablet Build number.

8. Forced shutdown

In case of your tablet was down and you are unable to turn it off according to standard procedures, press the power switch and hold it for 7 seconds, the tablet will be turned off.

9. Factory Reset

To restore the tablet to original factory settings and erase all personal informations, tap on “Settings”→ “Privacy” → “Factory data reset”.
Warning: After resetting the device, Google account, data, system settings, and downloaded applications will be deleted.

10. Battery Management

The battery is not fully charged from factory, so it is recommended that you charge the battery for at least 5 hours before you start to use the device.
The rechargeable battery is designed and manufactured to be used and recharged frequently. As same with all of lithium batteries, the capacity of the battery reduces each time it is charged. However, you can still try to prolong the battery’s lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Fully charge the battery regularly.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat and moisture.

Charge Battery

Plug the power adapter into an electrical wall outlet and then connect to the device to fully charge the battery before use.
You can not charge the battery by using the USB cable.
When fully charged, the battery icon displays as:

A fully discharged battery will take you approximately 5 hours, but you can use the device while it is being charged.

Do not use other adapters than the one provided in your packaging, it may cause damage to the Lithium battery inside.

Do not attempt to open the tablet to replace the battery inside, this will damage the tablet and void the warranty.

11. Important Safety Precautions

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

● Do not expose this product to rain or moisture.

● Keep the device out of direct sunlight and heat sources.

● Do not place other objects on LCD screen, as it may crush and damage the LCD screen.

● Do not use any sharp objects to touch the LCD screen, as this will scratch the screen.

● Only use the AC adapter included with the device. Using any other power adapters will damage your tablet and void the warranty.

● Do not attempt to dismantle the tablet by yourself to do any repair, this will damage the tablet and void the warranty.

12. Clean your Device

To clean fingerprints or dust from the screen, we recommend to use soft, non-abrasive and non-corrosive cloth for cleaning, such as a camera lens cloth.

Frequently Asked Questions

Android

Q: What Android OS version is on my Device?

A: Android 2.3.

Basic Functionality

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 5 hours, but you can use the device while it's being charged. Use the included power adapter to charge; this device can not be charged via the USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: Micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA.

Q: How do I add music files to my device?

A: Copy the music files from your PC, Micro SD card or USB storage device

directly to your device.

Photos

Q: What type of photo files can I view on my device?

A: JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photos from your PC, Micro SD card or USB storage device directly to your device.

Videos

Q: What type of video files can I play on my device?

A: MP3, WMA, MP2, AAC, WAV formats up to 1080P resolution.

Q: Can I play YouTube videos on my device?

A: Yes, you can run the YouTube application icon to play the videos.

Q: How do I add video files to my device?

A: Copy the video files from your PC, Micro SD card or USB storage device directly to your device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No, the Wi-Fi adapter is built-in to the device.